


ADAPTER EZ-GO ST 4X4
PART # EP-013H



SAFETY WARNING

1. ALWAYS WEAR EYE PROTECTION.
2. PLACE DIRECTIONAL SWITCH IN NEUTRAL.
3. PLACE KEY SWITCH IN THE OFF POSITION.
4. SET PARKING BRAKE.

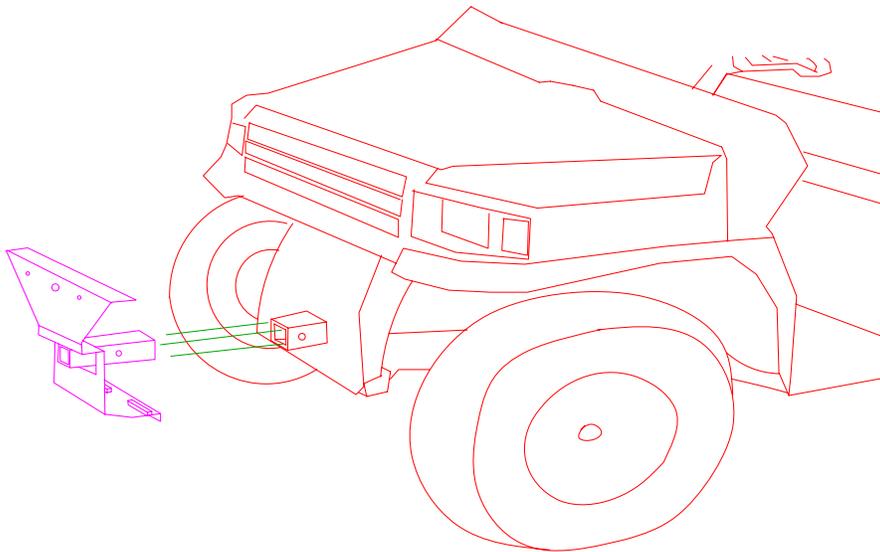

BOLT 1/2"-13X3 1/2"
NUT 1/2"-13
FLAT WASHER 1/2"

INSTALLATION

1. MAKE SURE THAT THERE IS NOTHING ATTACHED TO FRONT HITCH RECEIVER.
 2. SLIDE ADAPTER INTO FRONT HITCH RECEIVER MAKING SURE THAT HOLES LINE UP.
 3. PLACE BOLT THRU BOTH SECURING IT WITH NUT SUPPLIED.
-